


# Reprorubber® Single Application System

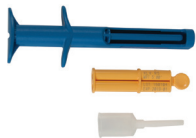

1. Reusable Hand Piece, Cartridge, Mixing Tip



2. Break off tab with hand piece pocket on end of handle.




3. Push on mixing tip until it snaps into place.



4. **Important:** Cartridge spur fits in square hole when assembled.



5. **Load** cartridge/mixing tip through side opening. Push forward. Bleed through tip prior to use. Mixing tip bends for greater access.

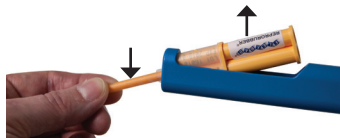

6. **Remove** cartridge/mixing tip through side opening. Push down on mixing tip and lift out.



250 Gibbs Road  
Islandia, NY 11749  
631.582.8440 • 800.879.7575  
sales@flexbar.com • www.flexbar.com