



Each Reproduction a Masterpiece With Flexbar *Reprorubber*® Impressions

Flexbar *Reprorubber* is the state-of-the-art metrology-grade, self-curing casting material. Now it's faster and easier to create virtually perfect replicas of both internal and external forms. Offered in three different viscosities, *Reprorubber* kits produce quick "zero shrinkage" reproductions in less than 10 minutes. *Reprorubber* flawless castings make it simple to check internal and external forms for non-destructive inspection and to measure for accuracy – even in hard-to-access part dimensions and surface finish geometrics.

• Flexbar Flexibility

Reprorubber sets the standards for simplicity and versatility. The easy-to-mix, two-part base/catalyst system comes in three viscosities:

1. *Reprorubber* Thin Pour (Light Green) – for internal forms requiring superior flow and detail.
2. *Reprorubber* Medium Body (Orange) – for both internal and external applications.
3. *Reprorubber* Quick Setting Putty (Light Blue) – for internal and external applications and with the ability to withstand temperatures of 600° F (315.5° C) or more.

• Convenient Pre-Filled Cartridges Also Available

The Repru Mix II Quick Dispense Cartridge System eliminates manual mixing. A dual barrel, reusable, rugged dispensing gun utilizes pre-filled *Reprorubber* cartridges in Thin Pour and Medium Orange viscosities. Disposable helix mixing nozzles can be used for each application, making the system waste-free and even more convenient to use.

• Unduplicated Benefits

Reprorubber offers numerous advantages over other hard-copy replicating materials:

- Quick casting – zero shrinkage
- No release agent required — will not stick to part.
- Surface finish replication is exact with excellent optical properties easily checked on an optical comparator or video inspection machine.
- Copies can be recopied from original mold.
- Replicas are permanent – will not leach out, ooze out, or outgas.
- No more 16 hour cure time as with RTV silicones.
- More accurate than all other RTV compounds.

• Industrial Applications

- Metalworking
- Automotive
- Aerospace
- Oil & Gas
- Medical Devices
- Plastics
- Sheet Metal & Stampings
- Forensics
- Art Restorations
- More

Flexbar *Reprorubber*® Self-Curing Formula — For the Measure of Perfection

Reprorubber – the easy metrology casting material:

- Easy to use convenient kits in 3 viscosities.
- Easy to mix non-toxic materials.
- Easy to remove the replica from the mold.
- Easy to cross-section with knife or razor.
- Easy to inspect internal & external forms.
- Easy to check on optical scanner or microscope.

Original Reprorubber® Thin Pour Final Color - LIGHT GREEN

For internal-shape applications where a thin pour will completely fill the cavity without voids. A complete replica casting is quickly formed.

- Manipulation time is approximately 2 minutes and cure time is approximately 10 minutes.
- Start to finish: approximately 12 minutes.
- Kits include graduated mixing cups, wooden spatulas and instructions.



New Reprorubber® Orange - Medium Body Prefilled Cartridges Final Color - ORANGE

New Medium Body (Medium Viscosity - Medium Durometer) casting material ideal for both internal and external applications. Disposable prefilled dual barrel 50ml cartridges can quickly dispense casting material utilizing the REPRO-MIX II Gun System.

- Mix time: 15-30 seconds and cure time is 5-6 minutes.
- Start to finish: 6-8 minutes.



New Reprorubber® Thin Pour Prefilled Cartridges Final Color - LIGHT GREEN

Same viscosity and durometer as Original Reprorubber Thin Pour. Disposable prefilled dual barrel 50ml cartridges can quickly mix and dispense casting material

utilizing the REPRO-MIX II Gun System. For internal-shape applications where a thin pour will completely fill the cavity without voids. A complete replica casting is quickly formed.

- Cure time is approximately 10 minutes.
- Start to finish: approximately 12 minutes.



Original Reprorubber® Quick Setting Putty Final Color - LIGHT BLUE

Roll two equal-sized balls of catalyst putty and base putty and simply knead them together like dough. Excellent for external shapes. Simply spread over master, pushing down with fingers, and wait for cure 8-10 minutes.

You have 1 or 2 minutes of manipulation time, therefore 12 minutes start to finish.

You can also cast internal shapes and cavities but some pressure should be applied such as a weighted object on top.



FLEXBAR Metrology Casting Material

ORDERING INFORMATION — ORIGINAL MIX YOUR OWN KITS

Original Reprorubber® Thin Pour Final Color - LIGHT GREEN

Trial Size Kit:

Order No. 16116 Thin Pour 130ml Trial Kit

Standard Size Kits:

Order No. 16135 Thin Pour 380ml Kit

Order No. 16137 Case of 10 each 380ml Kits



Original Reprorubber® Quick Setting Putty Final Color - LIGHT BLUE

Trial Size Kit:

Order No. 16129 220ml Quick Setting Putty Trial Kit

Other Kits:

Order No. 16130 1 3/4 lb. (520ml) Introductory Kit

Order No. 16131 7 lb. (2150ml) Economy Kit



Quick Dispense Cartridge System Kits

Reprorubber Quick Dispense Cartridge System Kits contain everything you need to easily create Highly Accurate, Zero Shrinkage replicas. Each kit includes 1 each Repru-Mix II Reusable Dispensing Gun, 6 each 50ml Prefilled Reprorubber Disposable Cartridges, 15 Disposable Mixing Nozzles, 2 Micro Injector Snap-On Nozzles, and a Deluxe Fitted Carrying Case.



Kit No. 16305

Reprorubber Orange
Also Available (see below)
Thin Pour (Green) and
Combo Kits.



No. 16301 Green



No. 16306 Orange

Low cost, disposable mixing nozzle tips allow multiple applications.



Snap-on Micro Inject Nozzle (optional) for small holes and cavities

ORDERING COMPLETE KITS:

No. 16300 Reprorubber Thin Pour (Green) Quick Dispense Cartridge System Kit Complete.

No. 16305 Reprorubber Orange (Medium Body) Quick Dispense Cartridge System Kit Complete.

No. 16309 Reprorubber Combo Quick Dispense Cartridge System Kit, Includes 3 each Thin Pour & 3 each Orange.

SYSTEM REFILLS:

No. 16301 Reprorubber Thin Pour (Green) 50ml Cartridge, 1 each.

No. 16302 Reprorubber Thin Pour (Green) 50ml Cartridges, 6 pack.

No. 16306 Reprorubber Orange (Medium Body) 50ml Cartridge, 1 each.

No. 16307 Reprorubber Orange (Medium Body) 50ml Cartridges, 6 pack.

No. 16311 Repru-Mix II Dispensing Gun (reusable).

No. 16313 Repru-Mix II Helix Mixing Nozzles, 15 Pack.

No. 16316 Repru-Mix II Helix Mixing Nozzles, 100 Pack.

No. 16315 Quick Dispense Cartridge System Fitted Case (without contents).

No. 16314 Micro Injector Snap-On Nozzle, Pack of 15.

PHYSICAL PROPERTIES AND APPLICATIONS

| | REPRORUBBER THIN POUR | REPRORUBBER MEDIUM BODY ORANGE | REPRORUBBER QUICK SETTING PUTTY |
|------------------------------------|----------------------------------|---|--|
| Mix Time | 15-30 seconds | 15-30 seconds | Approximately 1 minute |
| Working Time (Manipulation Time) | 2 minutes | 2.5 minutes | 1-2 minutes (from beginning of mix) |
| Setting Time (at room temperature) | 10-15 minutes | 5-6 minutes | 8-10 minutes |
| Permanent Deformation | 0.2% | 0.3% | 0.3% |
| Dimensional Stability | Less than 0.50% | Less than 0.40% | Less than -0.25% |
| Tear Strength | 44psi | 300psi | 105psi |
| Elongation | 60% at break | 70% at break | 6.3% at break |
| Durometer (Shore A-2) | 30 (at 15 minutes) | 40 (at 10 minutes) | 50 (at 7 minutes) |
| Temperature Stability | 1 week @ 23°C (72°F) | 1 week @ 23°C (72°F) | 1 week @ 23°C (72°F) |
| Detail Reproduction | EXCELLENT | EXCELLENT | EXCELLENT |

APPLICATIONS

You can take impressions of:





- **ALL METALS**
- **NON METALS**
- **PAPER OR CARDBOARD ITEMS**
- **WOOD, MARBLE, ETC.**
- **ALL PLASTICS**
- **RUBBER**
- **CERAMIC AND GLASS ITEMS**

Other Uses Include:

- Prototypes of rubber type components such as gaskets, washers, etc.
- As a mask for high temperature plasma spray of metallic coatings.
- Making joints where flexibility is required.
- Fixturing where semi-rigid structure is desired.

PHYSICAL ADVANTAGES OVER THE HARD-COPY REPLICAS


- Replica is easy to remove – even if there are under cuts or grooves.
- Cross-sectioning of replica is easily accomplished with a knife or razor.
- It can then be checked on an optical comparator or microscope.
- Surface finish replication is exact with excellent optical properties.
- *Reprorubber* copies can be recopied (copy from a “female mold” yields a male-shaped replica).
- Replicas are permanent – will not leach out, ooze out, or outgas.
- NO MORE 16 HOUR CURE TIME AS WITH RTV SILICONES.
- MORE ACCURATE THAN ALL OTHER RTV COMPOUNDS.
- *REPRORUBBER* PUTTY will withstand up to 600°F (or more).

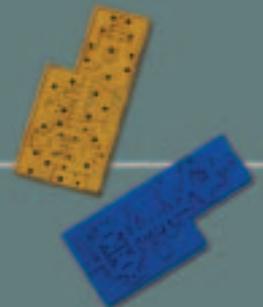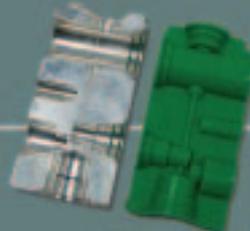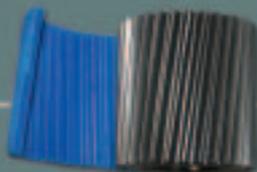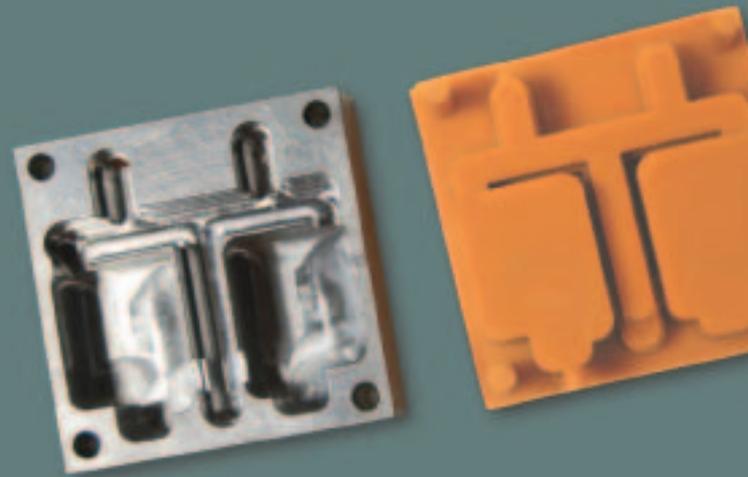

For additional information and applications, please visit our website, www.reprorubber.com.

Reprorubber® Single Application System

Convenient - Easy to Use
Quick Replicas with Zero Shrinkage!

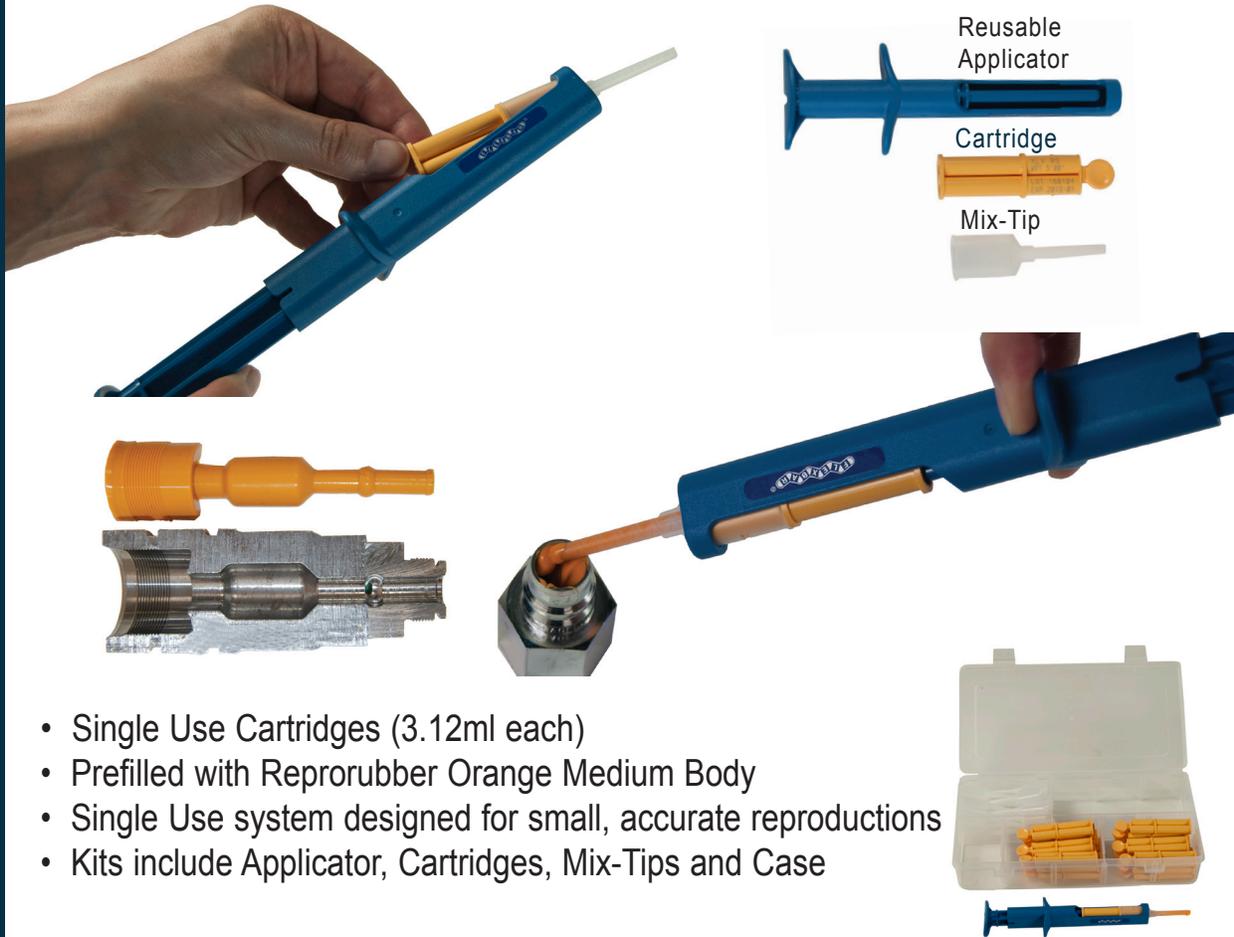

- Single Use Cartridges (3.12ml each)
- Prefilled with Reprorubber Orange Medium Body
- Single Use system designed for small, accurate reproductions
- Kits include Applicator, Cartridges, Mix-Tips and Case

Introductory Kits

| Model No. | Description |
|-----------|---|
| 16170 | 10 Use Kit. Includes Applicator, 10 Cartridges, 10 Mix-Tips |
| 16171 | 20 Use Kit. Includes Applicator, 20 Cartridges, 20 Mix-Tips |

Refills and Accessories

| Model No. | Description |
|-----------|------------------------------------|
| 16174-10 | 10 Piece Cartridge/Mix Tip Package |
| 16174-20 | 20 Piece Cartridge/Mix Tip Package |
| 16172 | Hand Applicator |
| 16173 | Case w/adjustable dividers |

NEW FROM FLEXBAR

Designed for small, accurate reproductions. No waste! No Mess!

INDUSTRIAL APPLICATIONS

Metalworking
Automotive
Aerospace
Oil & Gas
Medical Devices
Plastics
Sheet Metal & Stampings
Forensics
Art Restorations
Many More

FLEXBAR MACHINE CORPORATION

250 Gibbs Road
Islandia, NY 11749
Phone 631.582.8440
Fax 631.582.8487
Toll-free 800.879.7575
www.flexbar.com



Unique Products • Innovative Solutions

ReproCut™

Cutting Edge Solutions

New Specially Designed Tool Safely and Easily Cuts all Flexbar Reprorubber® Castings



- 2.25" Throat clearance, 2.5" Cutting Blade Width
- Easily trim flash and excess material
- Two sided operation
 - Single blade for variable thickness slicing
 - Dual blade for repeatable putty specimens
- Two handed operation improves accuracy & avoids injury
- Clear window allows direct view of cutting area
- Safety Cover doubles as a specimen removal tool

Model No. 16139 - ReproCut™ Cutting Tool System

Replacement Blades:

Model No. 16139-SB, Replacement Thin Cutter Blade

Model No. 16139-LB, Replacement Thick Cutter Blade



Unique Products • Innovative Solutions

NEW FROM FLEXBAR

Reprocut is the perfect compliment to our popular Reprorubber® product line.

IMPROVES ACCURACY

Produces even and accurate cross-sections of specimens that can be easily inspected.

AVOIDS WORKPLACE INJURY

Two handed operation keeps user out of harms way.

INDUSTRIAL APPLICATIONS

Metalworking

Automotive

Aerospace

Oil & Gas

Medical Devices

Plastics

Sheet Metal & Stampings

Forensics

Art Restorations



Many More

Flexbar ReproCut™



Uses & Applications

Produces Sharp and Accurate Cross-Sectioned Replicas for use with Optical Comparators & Video Measurement



Radius Measurements

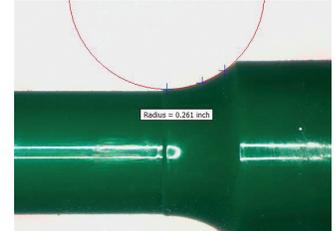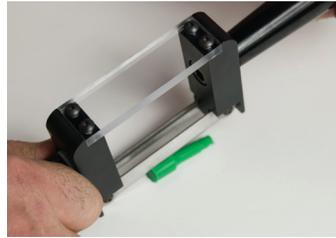

Length/Angle Measurements

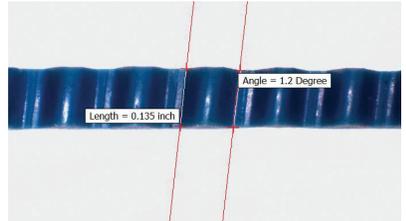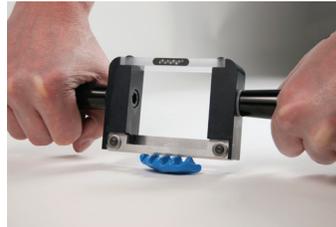

Pitch Diameter

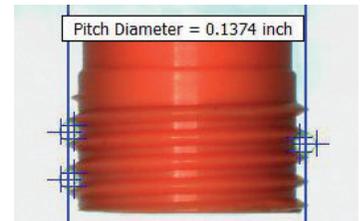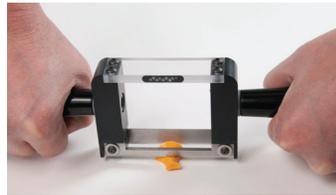

REPRORUBBER SUPPLIED IN THREE VISCOSITIES:

ORIGINAL THIN POUR

For internal-shape applications where a thin pour will completely fill the cavity without voids.

MEDIUM BODY - ORANGE

Medium body casting material ideal for both internal and external applications. Disposable prefilled dual barrel 50ml cartridges can quickly dispense casting material utilizing the REPRO-MIX II Gun System.

QUICK SETTING PUTTY

Roll two equal-sized balls of catalyst putty and base putty and simply knead them together like dough. Excellent for external shapes.

For more information on any of our products or services please visit us on the Web at:

www.repro-rubber.com

QUICK SETTING PUTTY



Safety Cover doubles as a specimen removal tool

ORIGINAL THIN POUR



MEDIUM BODY - ORANGE



FLEXBAR MACHINE CORPORATION
250 Gibbs Road • Islandia, NY 11749
Phone 631.582.8440
Fax 631.582.8487
Toll-free 800.879.7575
www.flexbar.com

© 2016 Flexbar Machine Corp., Islandia, NY USA